


Home Screen & Buttons

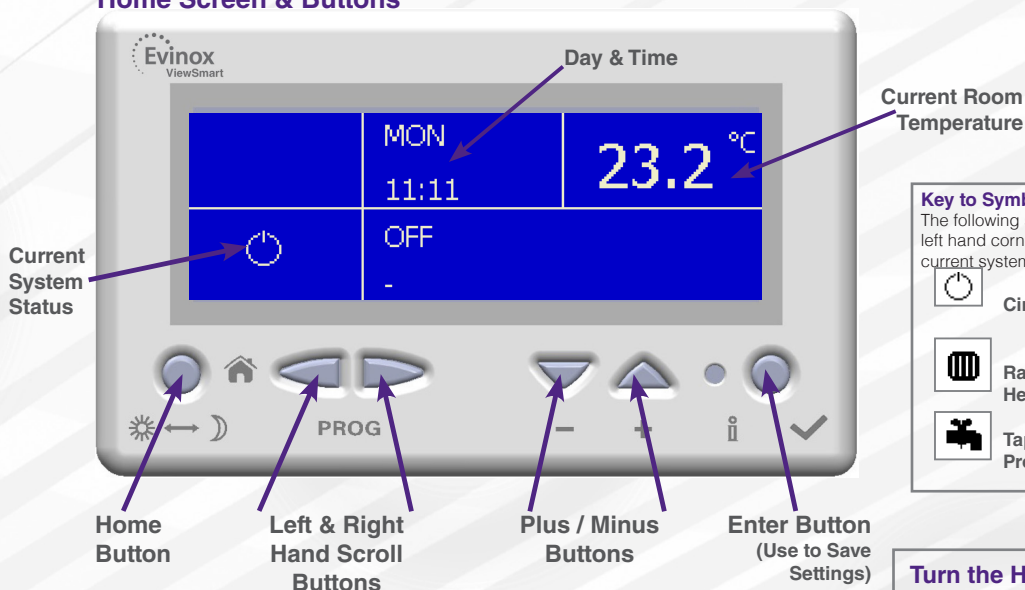

Key to Symbols

The following symbols are displayed in the bottom left hand corner of the home screen and indicate the current system status -



Circle Symbol - System Idle



Radiator Symbol - System in Heating Production



Tap Symbol - System in Hot Water Production

Setting the Time & Date

Press the **HOME** button to view the Main Menu.

Select **SYSTEM** by scrolling down using the **- button** and pressing the **Right Hand Scroll** button to enter the menu.

Select **DATE / TIME** using the **Right Hand Scroll** Button to enter the next screen.

Here is an example showing the **DATE / TIME** Screen, where you can make changes using the **Right Hand Scroll** button and the **+ & - buttons**.


Date/Time	
Date	21-08-2013 Wednesday
Time	15:25

Press the **ENTER BUTTON**, while each value is highlighted, to save each change.


Turn the Heating ON / OFF from the Home Screen

From the Home screen you can use the **Plus & Minus** buttons to increase or decrease the required room temperature.

To turn the heating ON – Press the **+** button to increase the temperature above the current room temperature this will activate the heating.

The Radiator symbol will be displayed when the heating is on - 

To turn the heating OFF - Press the **-** button to decrease the temperature below the current room temperature and the heating will be turned off.

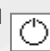The System Idle symbol will be displayed when the heating has been turned off - 

(You do not need to press the Enter button to save changes).

Programming your Heating

The controller can be set to programme the heating for weekly, daily and weekend schedules.

Press the **HOME** button to view the Main Menu.

Select **SCHEDULES** by scrolling down using the **- button** and pressing the **Right Hand Scroll** button to enter the menu.

Scroll down using the **- button** and select **HEATING**. Press the **Right Hand Scroll** Button to enter the next screen.

Use the **Right Hand Scroll** Button to highlight the values and the **+ & - Buttons** to scroll through the Days, Times and Modes

For heating ON Select COMFORT mode.

Heating	
Program	1
Day	Mo Tu We Th Fr
Interval	07:00 >> 09:00
Mode	Comfort

(The example shows a schedule for the Heating to be switched ON Mon - Fri between 7am-9am)

Press the **ENTER** button, while each value is highlighted, to save each change.

Please Note: You must select the **AUTO** operating mode, as per the instructions below, to activate the time schedule programme.

To Set AUTO Mode

Press the **HOME** button to view the Main Menu.

Select **USER SETTINGS** using the **Right Hand Scroll** Button.

Select **MODE** by scrolling down using the **- button** and press the **Right Hand Scroll** button to enter the Mode menu.

Select **HEATING MODE** using the **Right Hand Scroll** and then the **+ and - buttons** to scroll through to **AUTO**.

Press the **ENTER** button, while the mode is highlighted, to save the change.